


Trouble Shooting the Hammerhead Accessory

If your hammerhead unit is not functioning as expected, you might want to try the following:

- 1) **Turn down the sensitivity.** Due to the increased receiver area of the hammerhead, as compared with the CS-5000 alone, it is more sensitive, and can be overly so.
- 2) **Bump up the calibration point.** Since the nearest of the three transducers will be the one which reports the distance, you may need to raise the level of the stock that you calibrate to.

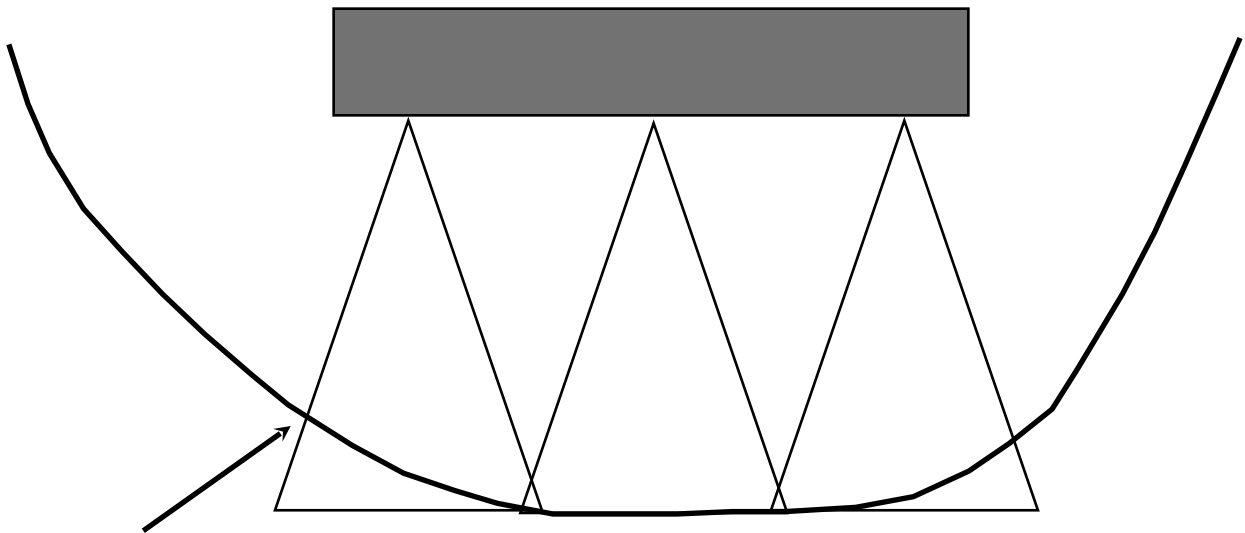

This point registers first